



CURVED
3 poles

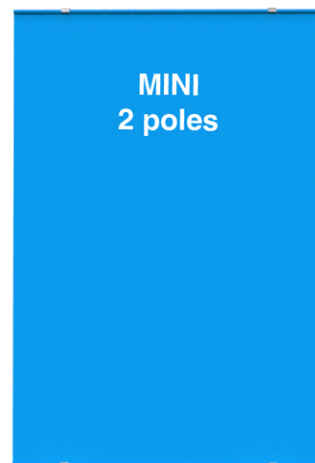

MINI
2 poles

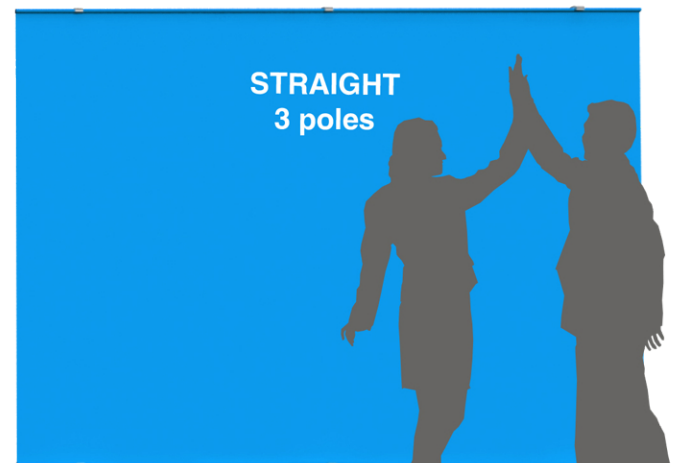

STRAIGHT
3 poles

FiV formz tension air




Place the feet approx. 4ft a part



Screw the poles clockwise into the feet




Extend the poles to full height & lock them

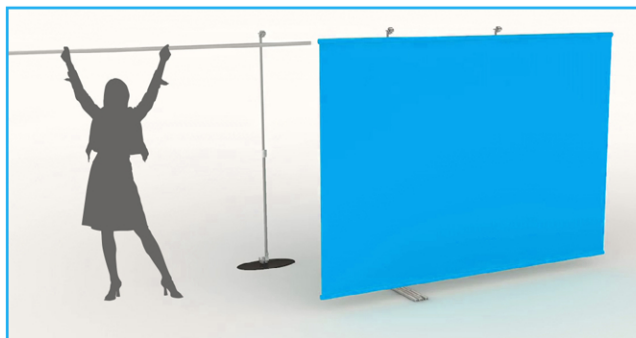

Slide the horizontale pole into the sleeve



Clamp it into the holders and secure them

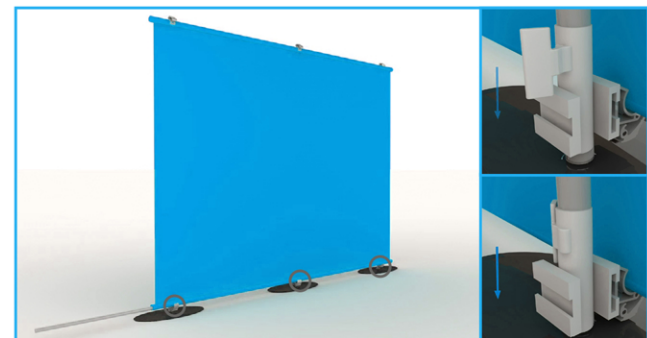

Same for the bottom, then stretch the fabric